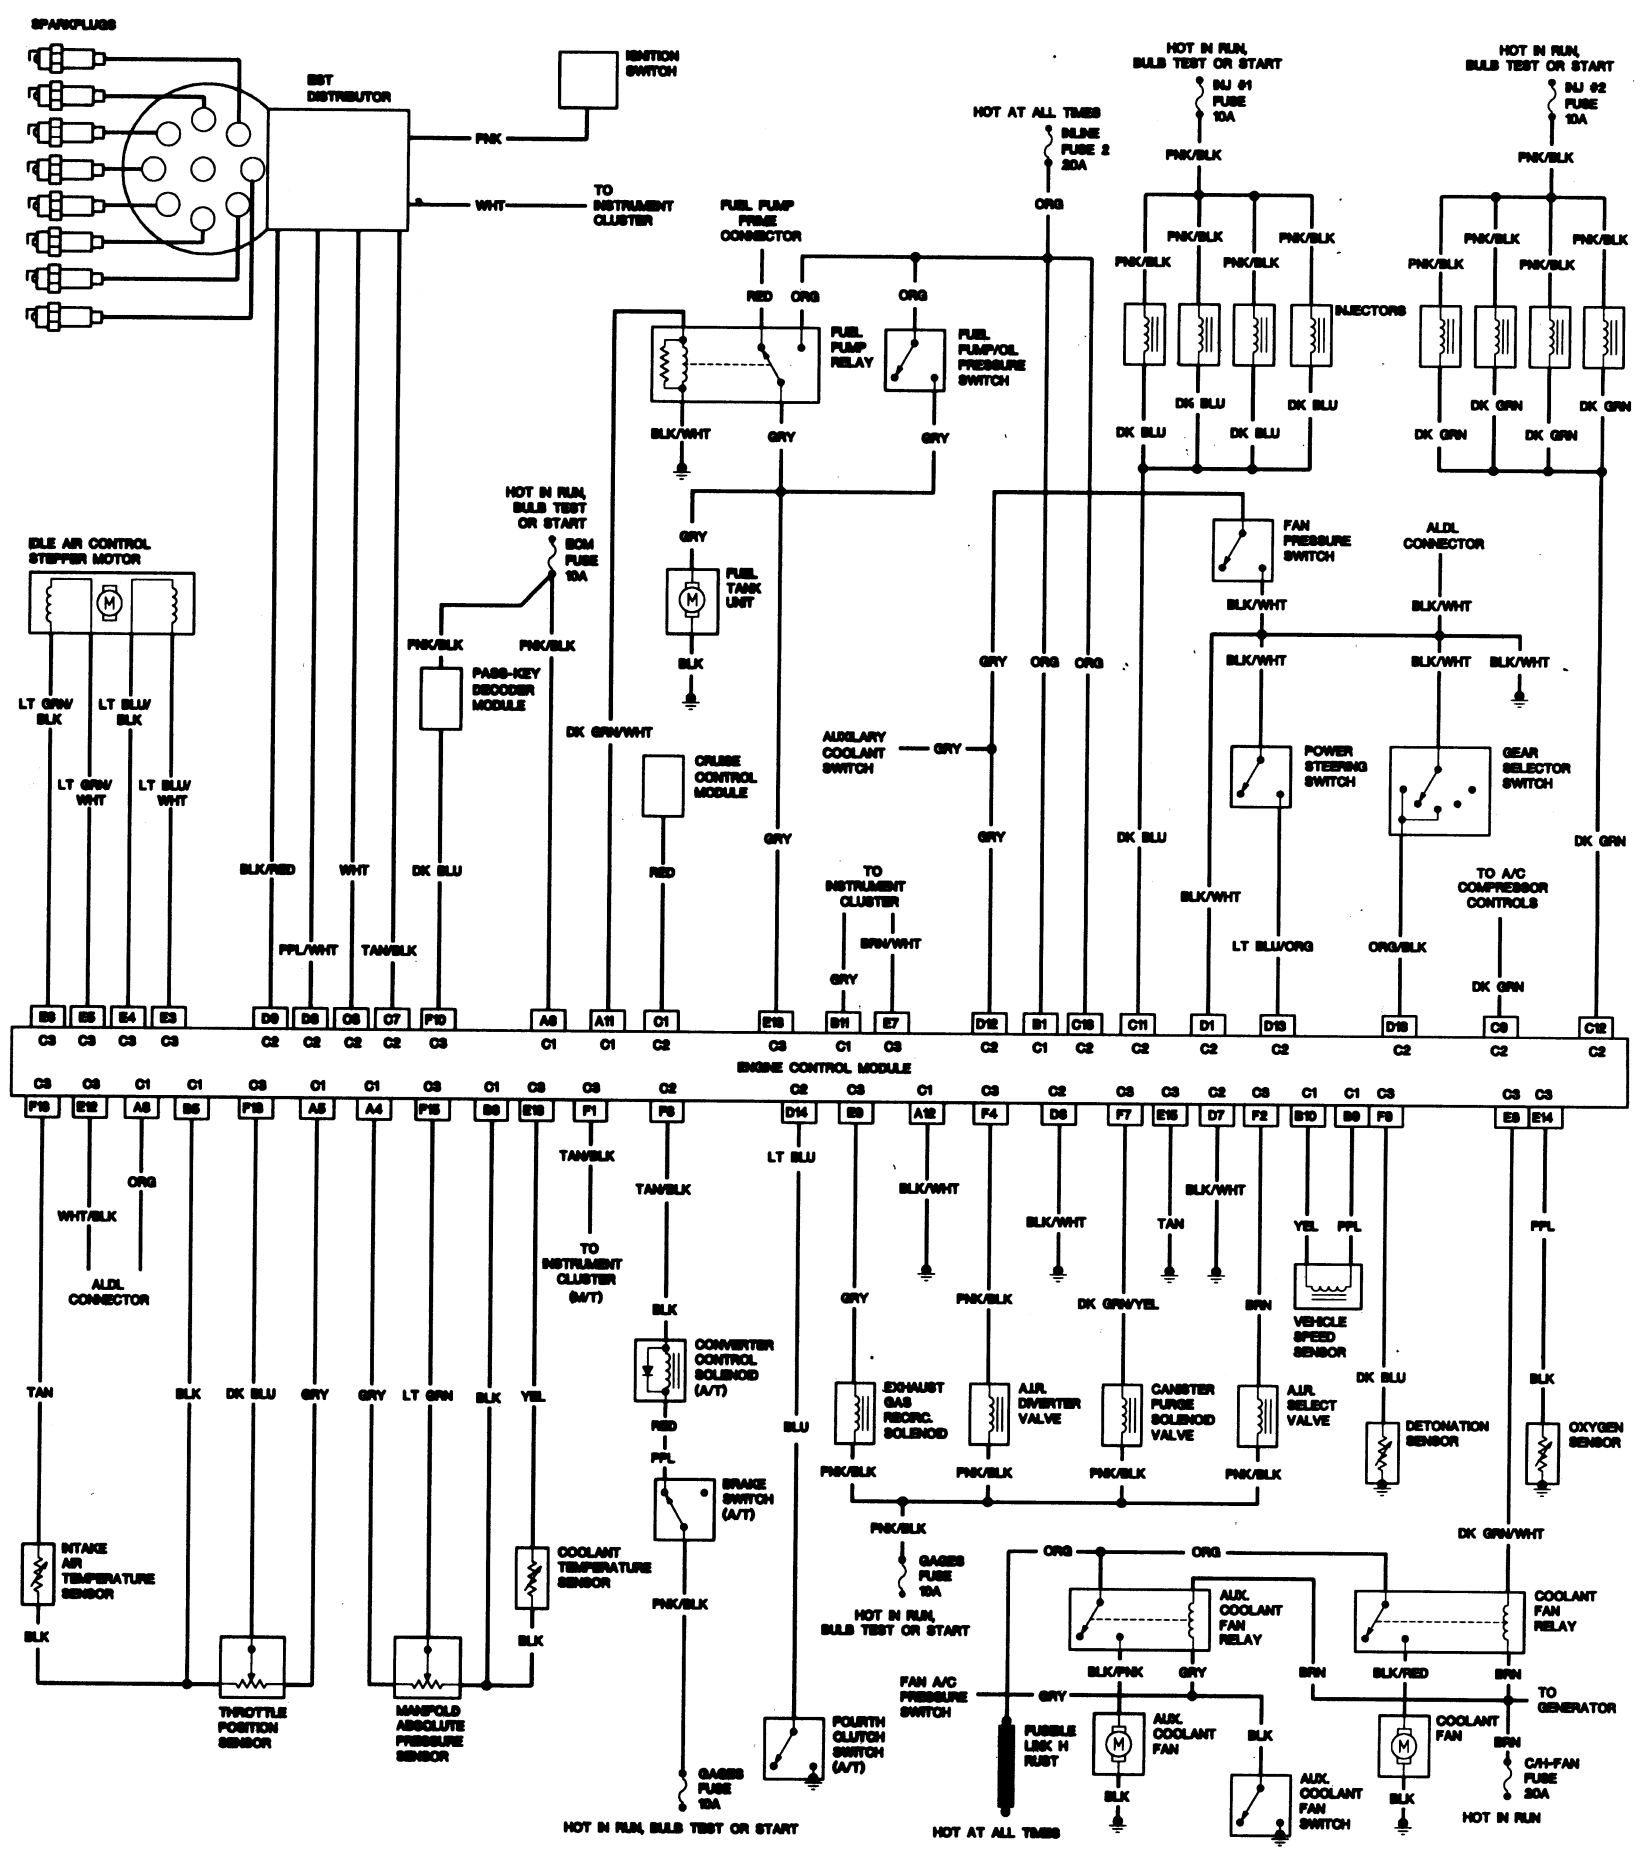
SPARKPLUGS
EST DISTRIBUTOR
IGNITION SWITCH
PNK
WHT
TO INSTRUMENT CLUSTER
HOT IN RUN, BULB TEST OR START
INJ #1 FUSE 10A
HOT AT ALL TIMES
INLINE FUSE 2 20A
INJ #2 FUSE 10A
PNK/BLK
ORG
FUEL PUMP PRIME CONNECTOR
RED
FUEL PUMP RELAY
FUEL PUMP/OIL PRESSURE SWITCH
INJECTORS
DK BLU
DK GRN
BLK/WHT
GRY
IDLE AIR CONTROL STEPPER MOTOR
BCM FUSE 10A
FUEL TANK UNIT
BLK
PASS-KEY DECODER MODULE
FAN PRESSURE SWITCH
ALDL CONNECTOR
LT GRN/BLK
LT BLU/BLK
LT GRN/WHT
LT BLU/WHT
BLK/RED
WHT
DK BLU
PPL/WHT
TAN/BLK
DK GRN/WHT
CRUISE CONTROL MODULE
AUXILARY COOLANT SWITCH
POWER STEERING SWITCH
GEAR SELECTOR SWITCH
TO INSTRUMENT CLUSTER
BRN/WHT
TO A/C COMPRESSOR CONTROLS
LT BLU/ORG
ORG/BLK
ENGINE CONTROL MODULE
TAN/BLK
TO INSTRUMENT CLUSTER (M/T)
WHT/BLK
ALDL CONNECTOR
CONVERTER CONTROL SOLENOID (A/T)
EXHAUST GAS RECIRC. SOLENOID
A.I.R. DIVERTER VALVE
CANISTER PURGE SOLENOID VALVE
A.I.R. SELECT VALVE
VEHICLE SPEED SENSOR
DETONATION SENSOR
OXYGEN SENSOR
BRAKE SWITCH (A/T)
INTAKE AIR TEMPERATURE SENSOR
COOLANT TEMPERATURE SENSOR
THROTTLE POSITION SENSOR
MANIFOLD ABSOLUTE PRESSURE SENSOR
FOURTH CLUTCH SWITCH (A/T)
GAGES FUSE 10A
HOT IN RUN, BULB TEST OR START
AUX. COOLANT FAN RELAY
COOLANT FAN RELAY
FAN A/C PRESSURE SWITCH
FUSIBLE LINK H RUST
AUX. COOLANT FAN
AUX. COOLANT FAN SWITCH
COOLANT FAN
TO GENERATOR
C/H-FAN FUSE 30A
HOT AT ALL TIMES
HOT IN RUN