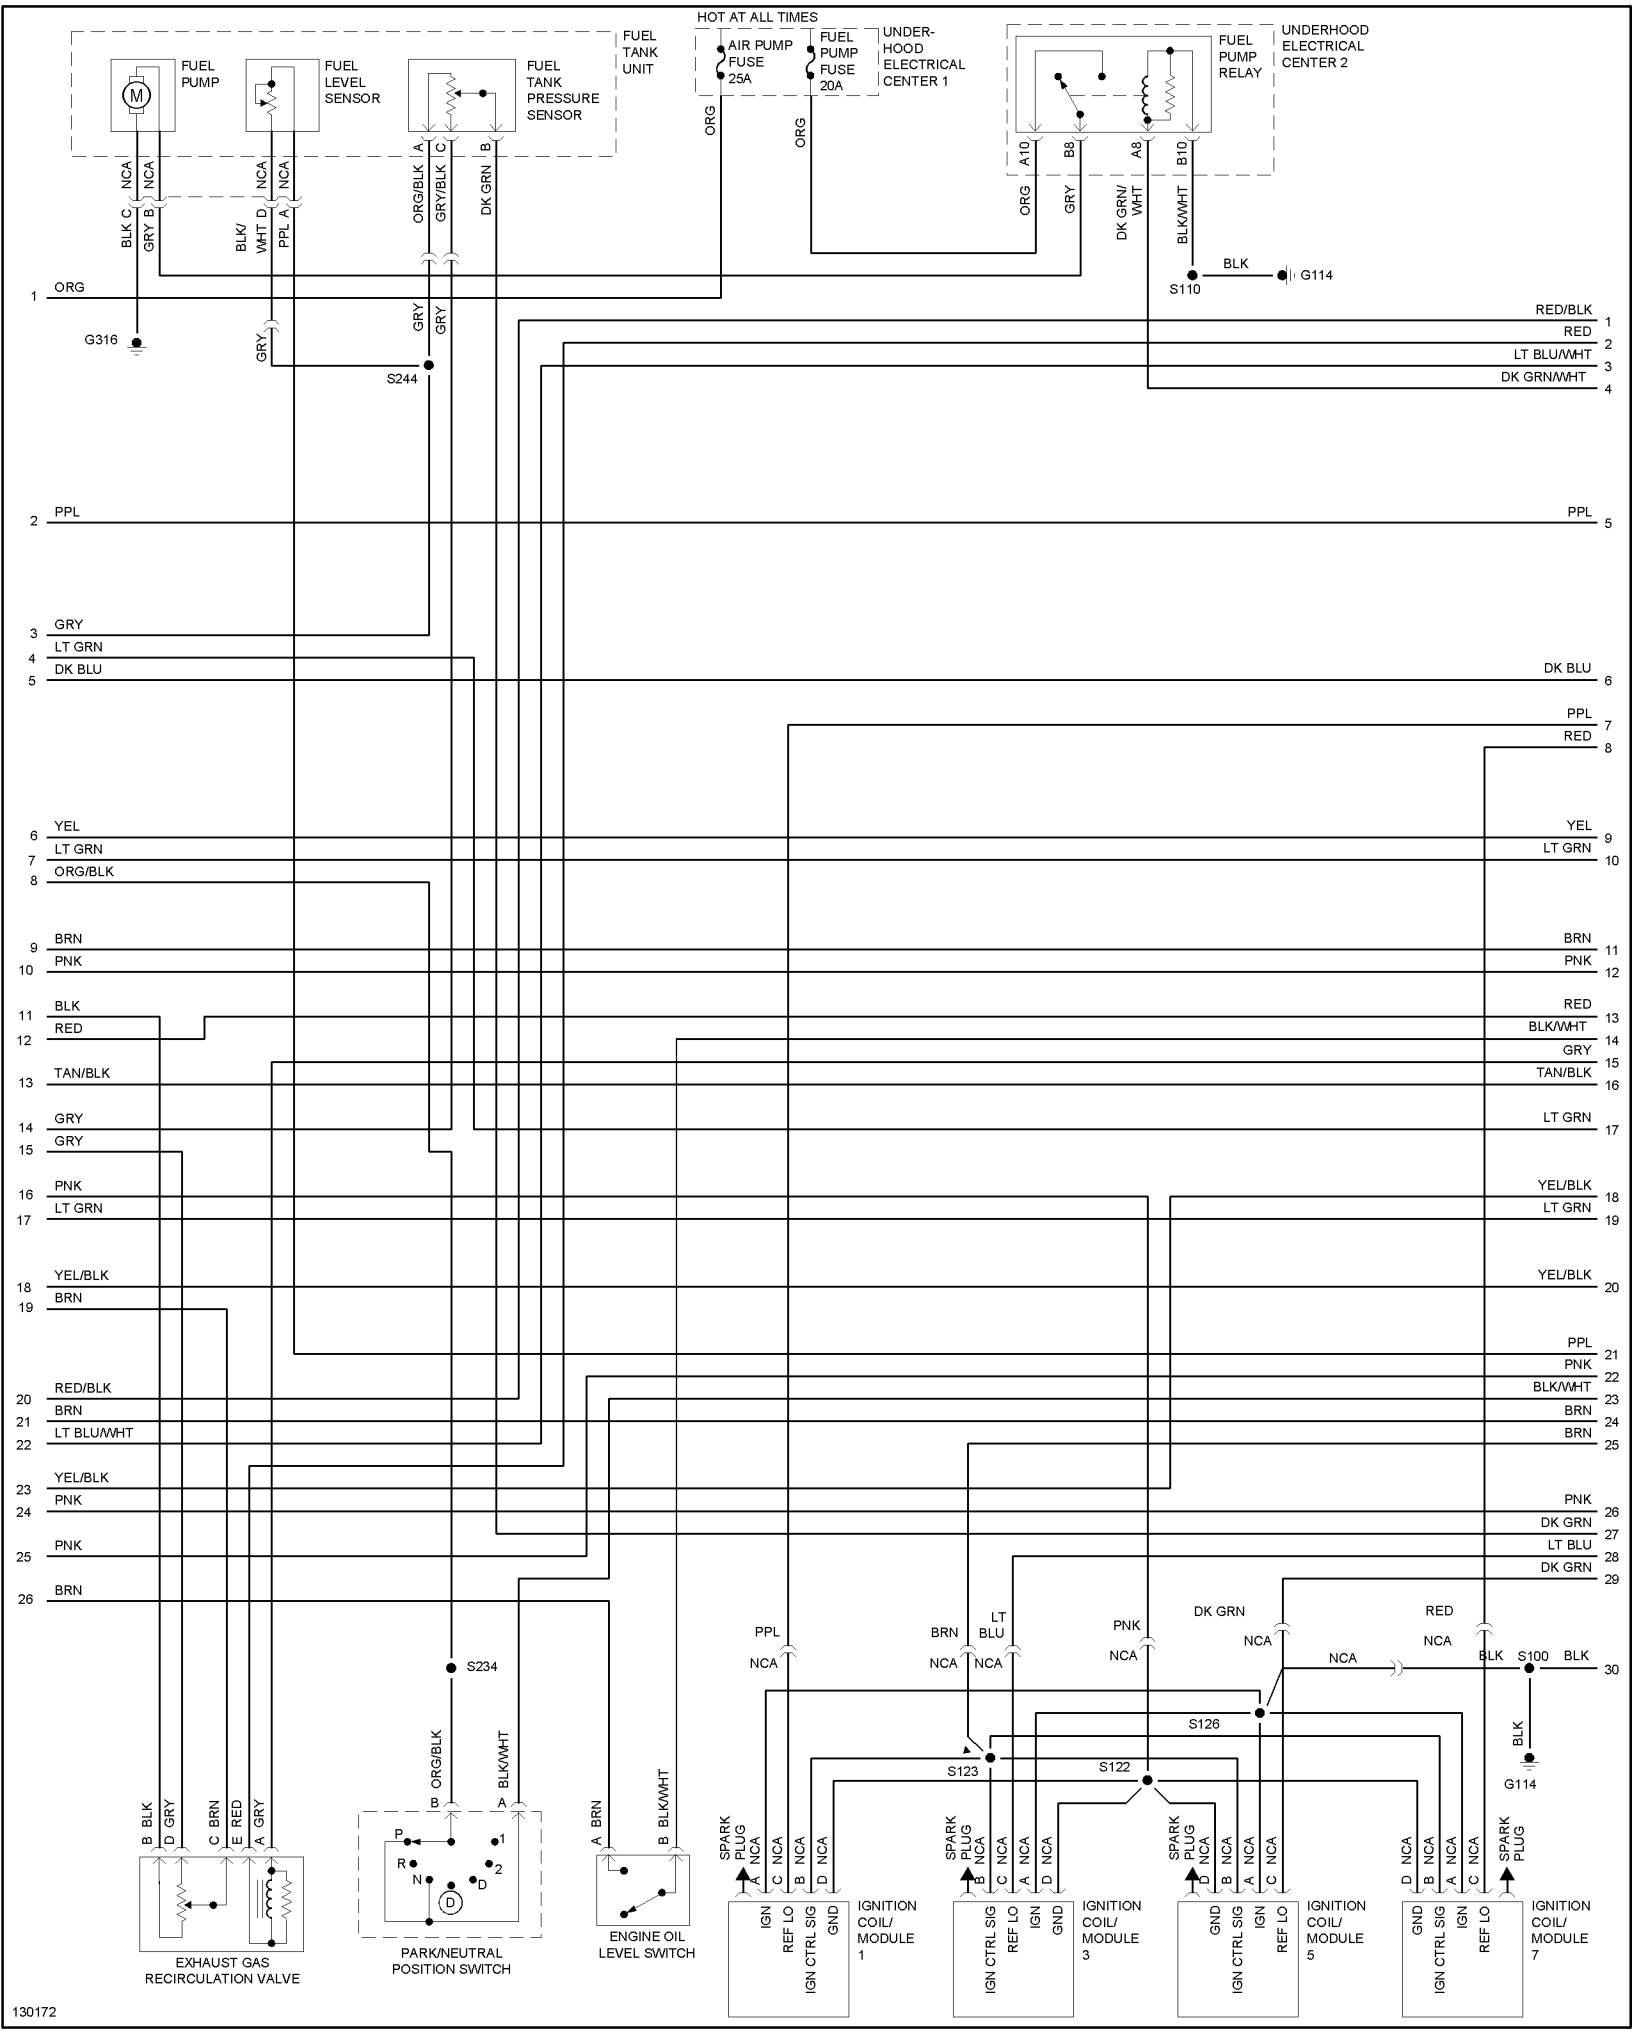
FUEL TANK UNIT
FUEL PUMP
FUEL LEVEL SENSOR
FUEL TANK PRESSURE SENSOR
HOT AT ALL TIMES
AIR PUMP FUSE 25A
FUEL PUMP FUSE 20A
UNDER-HOOD ELECTRICAL CENTER 1
FUEL PUMP RELAY
UNDERHOOD ELECTRICAL CENTER 2
G316
S244
S110
G114
S234
S123
S122
S126
S100
EXHAUST GAS RECIRCULATION VALVE
PARK/NEUTRAL POSITION SWITCH
ENGINE OIL LEVEL SWITCH
SPARK PLUG
IGNITION COIL/ MODULE 1
IGNITION COIL/ MODULE 3
IGNITION COIL/ MODULE 5
IGNITION COIL/ MODULE 7
130172