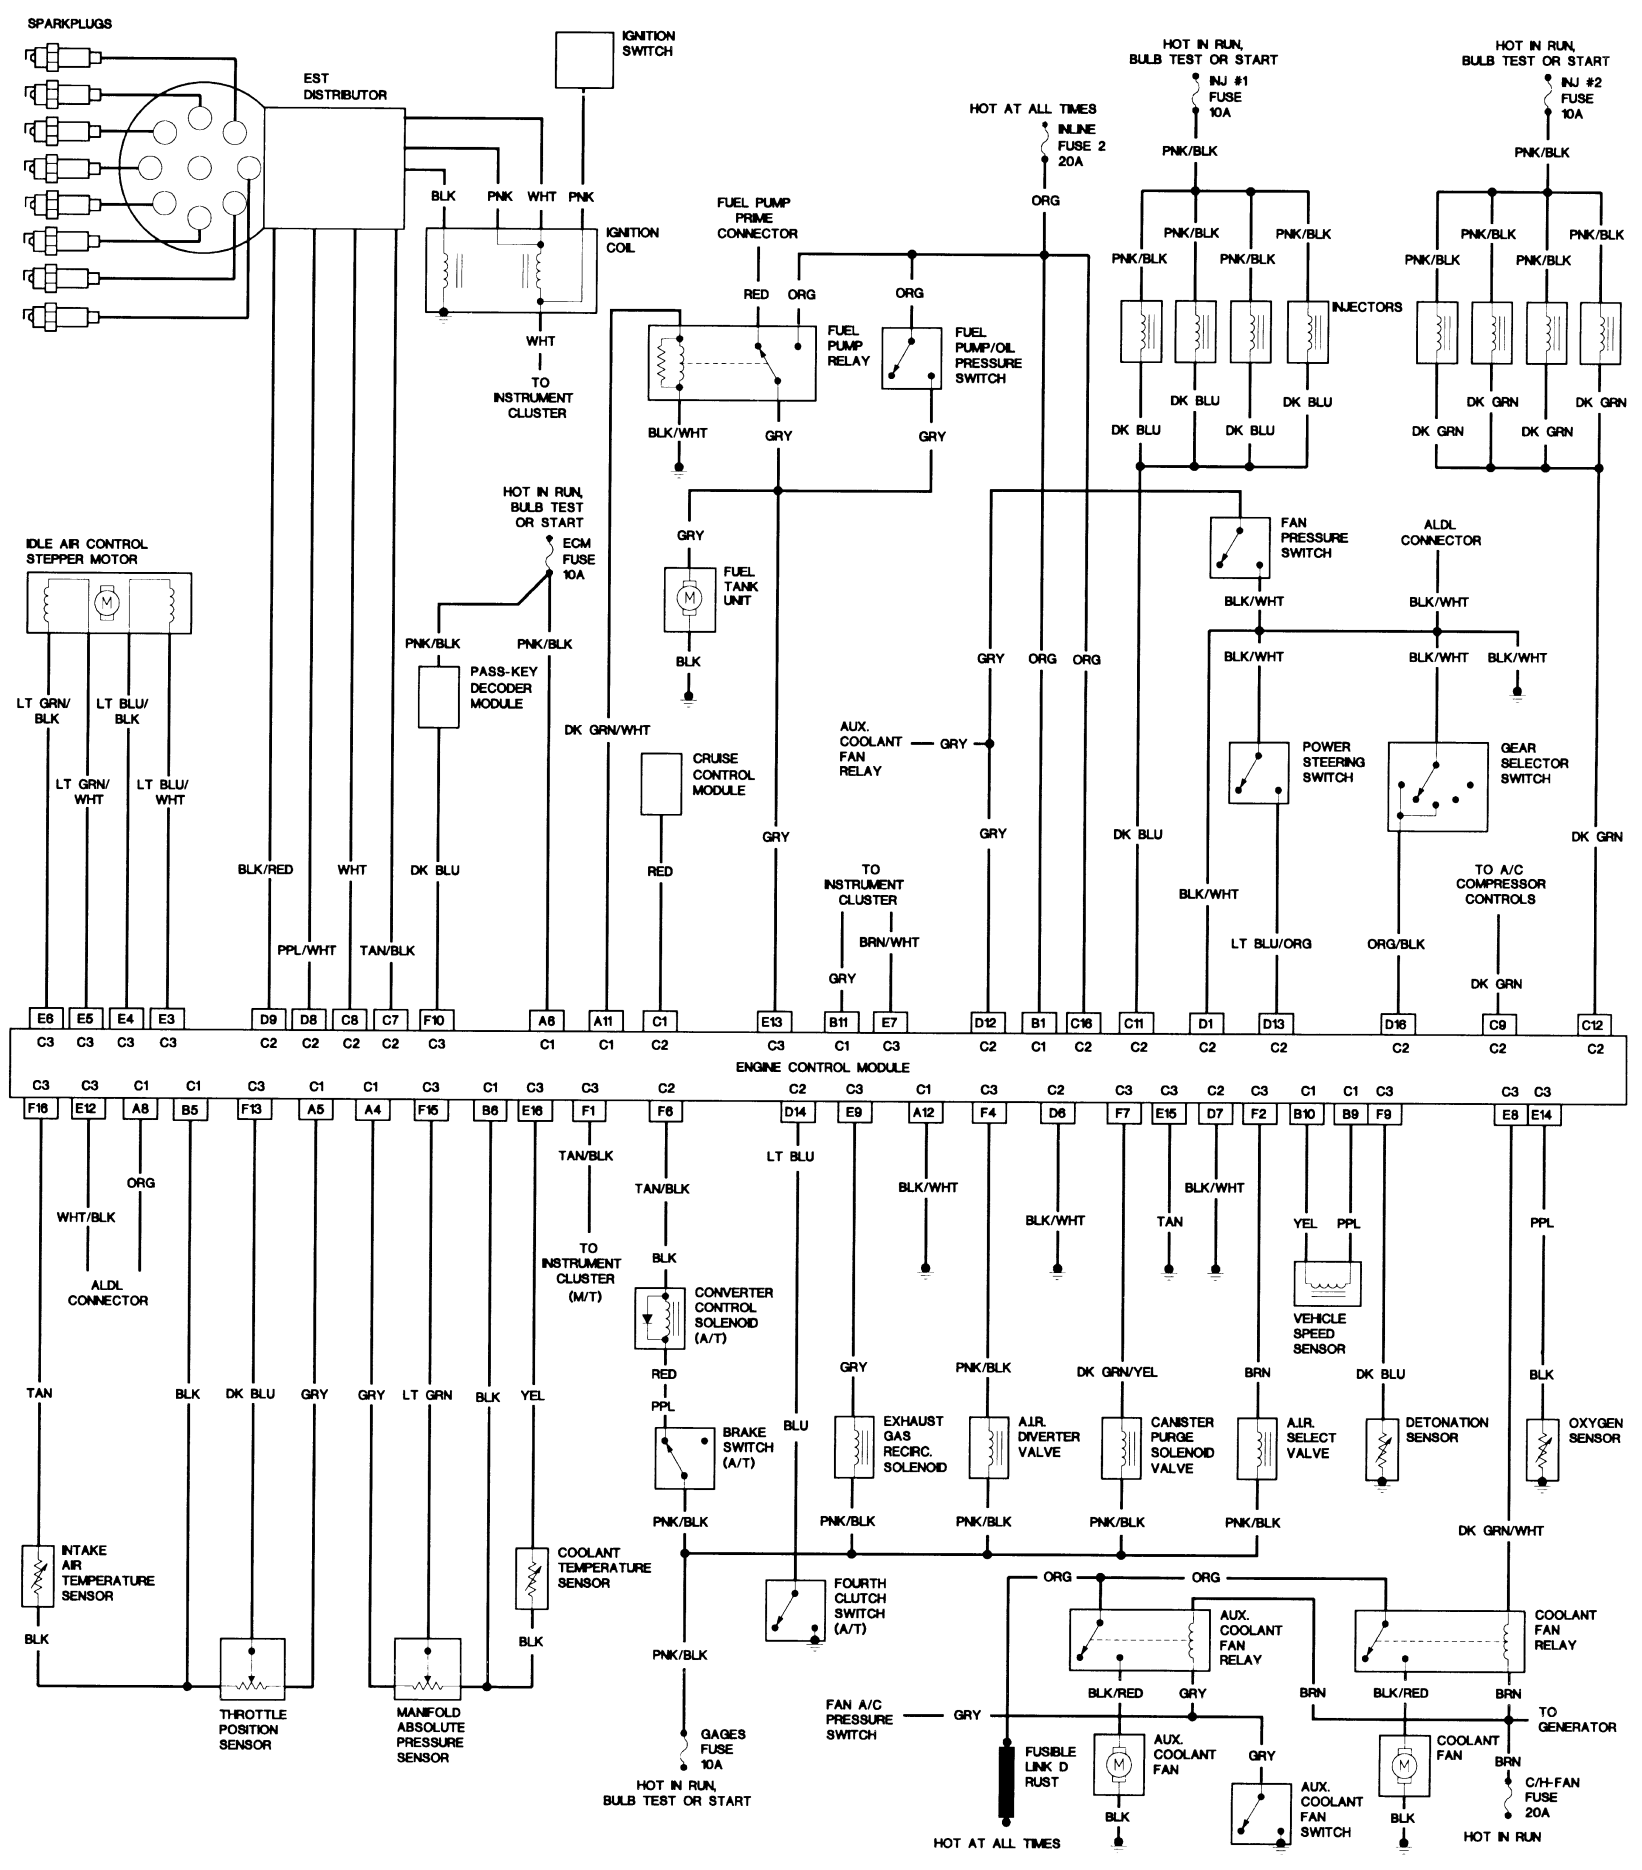
SPARKPLUGS
EST DISTRIBUTOR
IGNITION SWITCH
IGNITION COIL
BLK
PNK
WHT
PNK
WHT
TO INSTRUMENT CLUSTER
FUEL PUMP PRIME CONNECTOR
RED
ORG
ORG
FUEL PUMP RELAY
FUEL PUMP/OIL PRESSURE SWITCH
BLK/WHT
GRY
GRY
HOT AT ALL TIMES
INLINE FUSE 2 20A
ORG
HOT IN RUN, BULB TEST OR START
INJ #1 FUSE 10A
PNK/BLK
HOT IN RUN, BULB TEST OR START
INJ #2 FUSE 10A
PNK/BLK
PNK/BLK
PNK/BLK
PNK/BLK
PNK/BLK
PNK/BLK
PNK/BLK
PNK/BLK
INJECTORS
DK BLU
DK BLU
DK BLU
DK BLU
DK GRN
DK GRN
DK GRN
DK GRN
IDLE AIR CONTROL STEPPER MOTOR
LT GRN/ BLK
LT BLU/ BLK
LT GRN/ WHT
LT BLU/ WHT
HOT IN RUN, BULB TEST OR START
ECM FUSE 10A
PNK/BLK
PNK/BLK
PASS-KEY DECODER MODULE
GRY
FUEL TANK UNIT
BLK
DK GRN/WHT
CRUISE CONTROL MODULE
RED
AUX. COOLANT FAN RELAY
GRY
GRY
GRY
GRY
ORG
ORG
FAN PRESSURE SWITCH
BLK/WHT
ALDL CONNECTOR
BLK/WHT
BLK/WHT
BLK/WHT
BLK/WHT
POWER STEERING SWITCH
GEAR SELECTOR SWITCH
DK BLU
DK GRN
BLK/RED
WHT
DK BLU
PPL/WHT
TAN/BLK
TO INSTRUMENT CLUSTER
BRN/WHT
GRY
BLK/WHT
LT BLU/ORG
ORG/BLK
TO A/C COMPRESSOR CONTROLS
DK GRN
E6 E5 E4 E3 D9 D8 C8 C7 F10 A6 A11 C1 E13 B11 E7 D12 B1 C16 C11 D1 D13 D16 C9 C12
C3 C3 C3 C3 C2 C2 C2 C2 C3 C1 C1 C2 C3 C1 C3 C2 C1 C2 C2 C2 C2 C2 C2 C2
ENGINE CONTROL MODULE
C3 C3 C1 C1 C3 C1 C1 C3 C1 C3 C3 C2 C2 C3 C1 C3 C2 C3 C3 C2 C3 C1 C1 C3 C3 C3
F16 E12 A8 B5 F13 A5 A4 F15 B6 E16 F1 F6 D14 E9 A12 F4 D6 F7 E15 D7 F2 B10 B9 F9 E8 E14
TAN/BLK
TO INSTRUMENT CLUSTER (M/T)
TAN/BLK
LT BLU
BLK/WHT
BLK/WHT
BLK/WHT
TAN
BLK/WHT
YEL
PPL
PPL
ORG
WHT/BLK
ALDL CONNECTOR
BLK
CONVERTER CONTROL SOLENOID (A/T)
VEHICLE SPEED SENSOR
RED
PPL
GRY
PNK/BLK
DK GRN/YEL
BRN
DK BLU
BLK
TAN
BLK
DK BLU
GRY
GRY
LT GRN
BLK
YEL
BRAKE SWITCH (A/T)
BLU
EXHAUST GAS RECIRC. SOLENOID
A.I.R. DIVERTER VALVE
CANISTER PURGE SOLENOID VALVE
A.I.R. SELECT VALVE
DETONATION SENSOR
OXYGEN SENSOR
PNK/BLK
PNK/BLK
PNK/BLK
PNK/BLK
PNK/BLK
DK GRN/WHT
INTAKE AIR TEMPERATURE SENSOR
COOLANT TEMPERATURE SENSOR
FOURTH CLUTCH SWITCH (A/T)
ORG
ORG
AUX. COOLANT FAN RELAY
COOLANT FAN RELAY
BLK
BLK
PNK/BLK
BLK/RED
GRY
BRN
BLK/RED
BRN
THROTTLE POSITION SENSOR
MANIFOLD ABSOLUTE PRESSURE SENSOR
GAGES FUSE 10A
HOT IN RUN, BULB TEST OR START
FAN A/C PRESSURE SWITCH
GRY
TO GENERATOR
FUSIBLE LINK D
RUST
AUX. COOLANT FAN
GRY
COOLANT FAN
BRN
HOT AT ALL TIMES
BLK
AUX. COOLANT FAN SWITCH
BLK
C/H-FAN FUSE 20A
HOT IN RUN