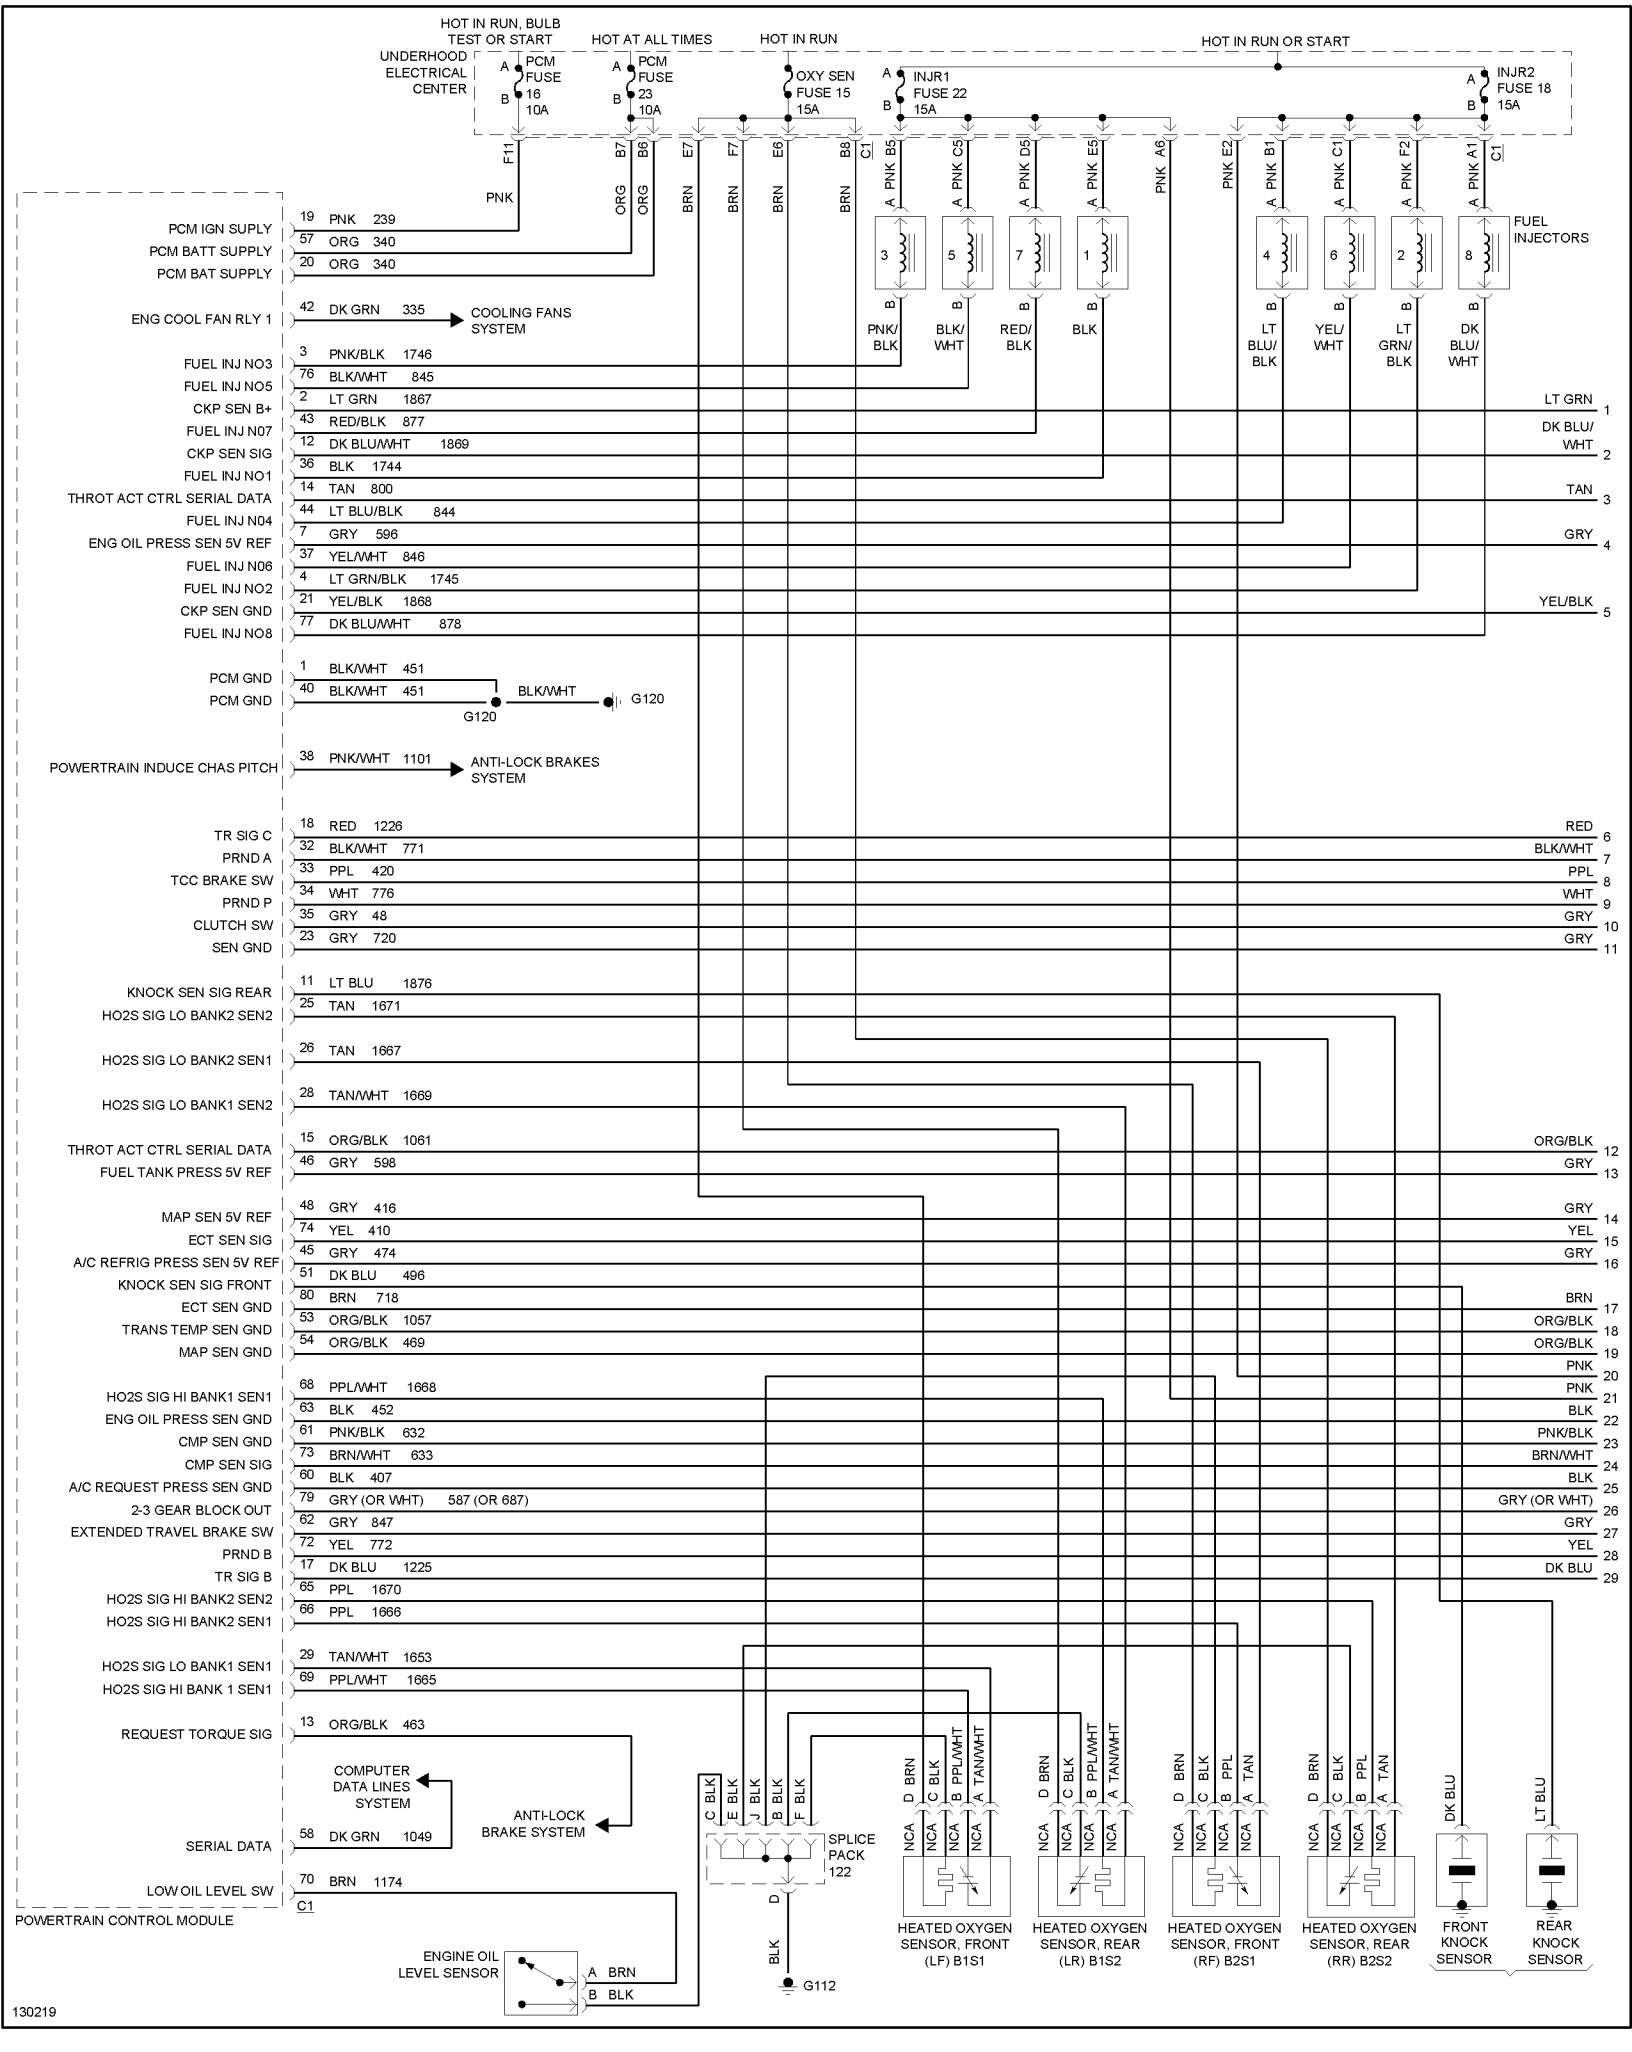
HOT IN RUN, BULB TEST OR START
HOT AT ALL TIMES
HOT IN RUN
HOT IN RUN OR START
UNDERHOOD ELECTRICAL CENTER
PCM FUSE 16 10A
PCM FUSE 23 10A
OXY SEN FUSE 15 15A
INJR1 FUSE 22 15A
INJR2 FUSE 18 15A
FUEL INJECTORS
PCM IGN SUPLY
PCM BATT SUPPLY
PCM BAT SUPPLY
ENG COOL FAN RLY 1
COOLING FANS SYSTEM
FUEL INJ NO3
FUEL INJ NO5
CKP SEN B+
FUEL INJ NO7
CKP SEN SIG
FUEL INJ NO1
THROT ACT CTRL SERIAL DATA
FUEL INJ NO4
ENG OIL PRESS SEN 5V REF
FUEL INJ NO6
FUEL INJ NO2
CKP SEN GND
FUEL INJ NO8
PCM GND
PCM GND
G120
POWERTRAIN INDUCE CHAS PITCH
ANTI-LOCK BRAKES SYSTEM
TR SIG C
PRND A
TCC BRAKE SW
PRND P
CLUTCH SW
SEN GND
KNOCK SEN SIG REAR
HO2S SIG LO BANK2 SEN2
HO2S SIG LO BANK2 SEN1
HO2S SIG LO BANK1 SEN2
THROT ACT CTRL SERIAL DATA
FUEL TANK PRESS 5V REF
MAP SEN 5V REF
ECT SEN SIG
A/C REFRIG PRESS SEN 5V REF
KNOCK SEN SIG FRONT
ECT SEN GND
TRANS TEMP SEN GND
MAP SEN GND
HO2S SIG HI BANK1 SEN1
ENG OIL PRESS SEN GND
CMP SEN GND
CMP SEN SIG
A/C REQUEST PRESS SEN GND
2-3 GEAR BLOCK OUT
EXTENDED TRAVEL BRAKE SW
PRND B
TR SIG B
HO2S SIG HI BANK2 SEN2
HO2S SIG HI BANK2 SEN1
HO2S SIG LO BANK1 SEN1
HO2S SIG HI BANK 1 SEN1
REQUEST TORQUE SIG
COMPUTER DATA LINES SYSTEM
ANTI-LOCK BRAKE SYSTEM
SERIAL DATA
LOW OIL LEVEL SW
POWERTRAIN CONTROL MODULE
SPLICE PACK 122
G112
ENGINE OIL LEVEL SENSOR
HEATED OXYGEN SENSOR, FRONT (LF) B1S1
HEATED OXYGEN SENSOR, REAR (LR) B1S2
HEATED OXYGEN SENSOR, FRONT (RF) B2S1
HEATED OXYGEN SENSOR, REAR (RR) B2S2
FRONT KNOCK SENSOR
REAR KNOCK SENSOR
130219